

SHIFT CASE by INO^{VR}

QUICK-START

GUIDE

PICO 4 ULTRA VERSION

2-MINUTE SETUP

1

**STEP 1**

Open your case by activating the locking system.

2

**STEP 2**

Once the case is open, remove the wireless keyboard from its slot, then the headset and controllers from the foam.

3

**STEP 3**

Connect the power supply to an electrical socket.

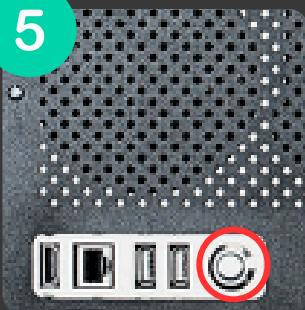


4

**STEP 4**

Make sure the power supply is in the "ON" position.

5

**STEP 5**

Press the power button on the front of the case (the button lights up when the computer starts).

6

**STEP 6**

Make sure that the router (included as an option) is plugged in and that the "ON" position is engaged.

**YOUR CASE IS READY, TIME TO START
YOUR HEADSET**

FOR WIRED USE**1****STEP 1**

Locate the USB-C port on your Pico 4 Ultra headset.

2**STEP 2**

Connect your USB-C cable to the headset.

3**STEP 3**

Plug the other end of your cable into the PC.

4**STEP 4**

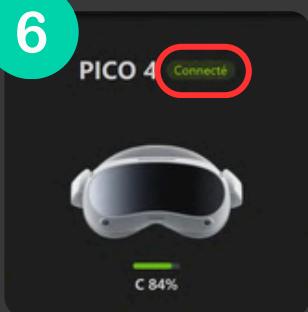
Check that your headset is turned on, then click on the "USB" connection mode.

5

**STEP 5**

Open Pico Business Streaming on your headset and select your PC from the list on the right. Click "connect."

6

**STEP 6**

Make sure the text "Connected" is displayed next to your headset.

7

**STEP 7**

Put on your headset.

YOU ARE NOW READY TO LAUNCH**YOUR COMPUTER APP** 😊

FOR STREAMING USE**1****STEP 1**

Make sure that the headset and PC are connected to the same Wi-Fi network on the 5GHz band.

2**STEP 2**

Open Pico Business Streaming on your PC and click WiFi.

3**STEP 3**

Turn on and put on your headset.

4**STEP 4**

Open Pico Business Streaming on your headset and select your PC from the list on the right.

5

**STEP 5**

Click Connect.

YOU ARE NOW READY TO LAUNCH**YOUR COMPUTER APP** 😊