INO VR

SHIFT CASE by **INO** VR

QUICK-START GUIDE

VIVE COSMOS VERSION

2-MINUTE SETUP

STEP 1

Open your case by activating the locking system.

STEP 2

Once the case is open, remove the wireless keyboard from its slot, then the headset and controllers from the foam.
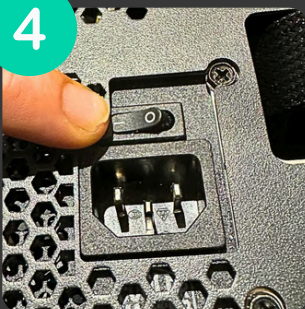

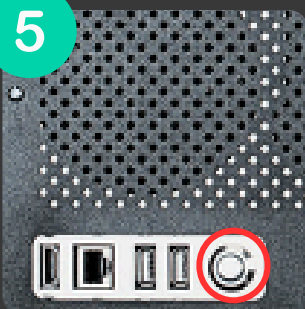**STEP 3**

Connect the power supply to an electrical socket.

STEP 4

Make sure the power supply is in the "ON" position.

STEP 5

Press the power button on the front of the case (the button lights up when the computer starts).

6

STEP 6

Make sure that the router (included as an option) is plugged in and that the "ON" position is engaged.

YOUR CASE IS READY, TIME TO START YOUR HEADSET

INO VR

1

STEP 1

Make sure that the VIVE and Steam VR applications are properly installed and launched on the computer.

2

STEP 2

Make sure that your Linkbox (Usb and Displayport) is connected to the computer and to an electrical socket.

3

STEP 3

Make sure your headset is plugged into the Linkbox and switch it on.

4

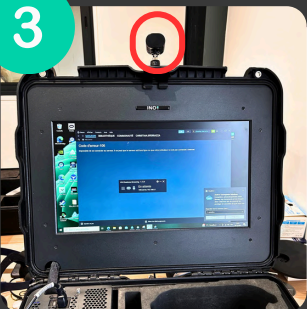### STEP 4

Put on your headset and start your controllers.

YOU ARE READY ☺

FOR WIRELESS USE

1

STEP 1

Make sure that the VIVE Wireless and Steam VR applications are installed and running on your computer.

2

STEP 2

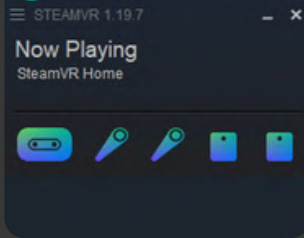Connect your VIVE Wireless adapter to the Powerbank using the USB cable.

3

STEP 3

Place the antenna on the top of the case lid.

4

STEP 4

Switch on the Powerbank by pressing the button.

5

STEP 5

Open the Console VIVE application on your PC and check

that it detects your headset and controllers.

YOU ARE READY ☺