



*SHIFT CASE* by **INO** 

# QUICK-START GUIDE

META QUEST VERSION

2-MINUTE SETUP

1




Open your case by activating the locking system

2



Once the case is open, remove the wireless keyboard from its slot, then remove the headset and controllers from the foam

3

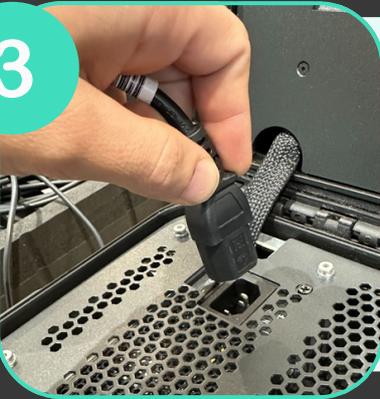

Connect the power supply to an electrical socket




4



Make sure the power supply is in the "ON" position

5

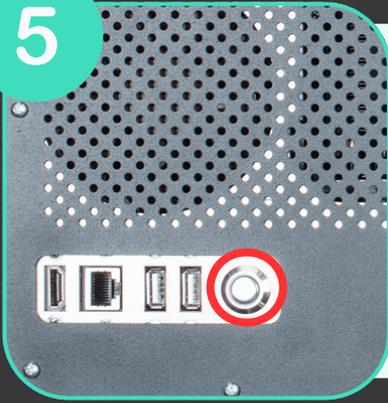

Press the power button on the front of the case (the button lights up when the computer starts)

6



Make sure that the router (included as an option) is plugged in and that the "ON" position is engaged.

YOUR CASE IS READY, TIME TO START YOUR HEADSET

For wired use

1



Make sure that the Oculus application is installed and running on your computer

2



Turn on your headset

3



Connect your Link cable to your computer and headset (USB 3 cable)



4



Put on your headset

5




Press the button  on your right controller

6



Hover over the clock on the left of the general menu and click on it to access the Quick Settings menu

7

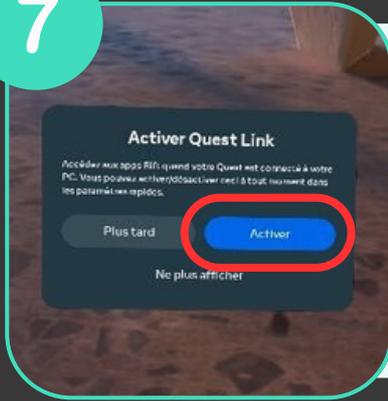

Select System, then select and launch Quest Link

YOU ARE NOW READY TO LAUNCH YOUR  
COMPUTER APP 😊

## For streaming use

1



Make sure that the Oculus application is installed and running on your computer

2



Make sure your computer is connected to a router via an Ethernet cable

3



Make sure that your headset is connected to the same Wi-Fi network as your computer using the 5 GHz band (AC or AX)

4



Switch on and put on your headset

5




Press the button  on your right controller

6




Hover over the clock on the left of the general menu and click on it to access the Quick Settings menu

7

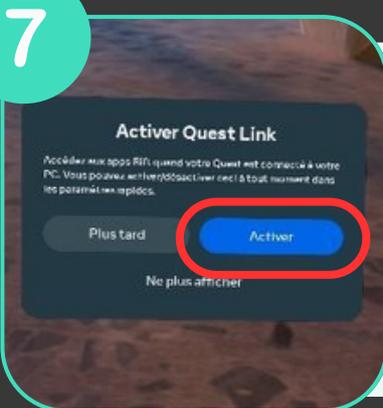

Select System, then select and launch Quest Link

8

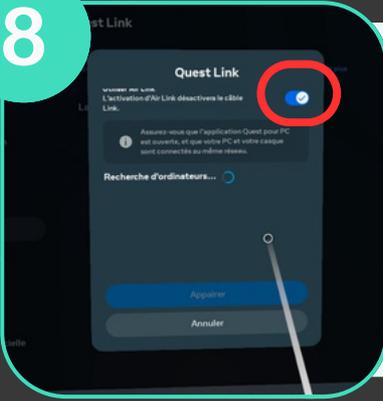

Select the button next to "Use Air Link"

9



Select your computer from the list of available computers

YOU ARE NOW READY TO LAUNCH YOUR  
COMPUTER APP 😊